


Maintenance

After using the diffuser for 5-6 times or 3-5 days, clean the diffuser as follows:

1. Disconnect the power and remove the cover.
2. Drain the rest of the water from the unit's drain side.
3. Use a gentle diluted kitchen detergent on a damp cloth to clean the unit.
4. If the air outlet is dirty inside, remove the cover to clean it. See figure at right.
5. Do not use benzene ethanol or any other medical cleaner.

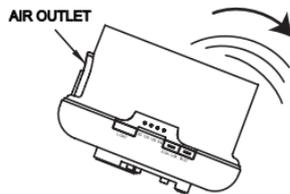

Warnings

In order to avoid damage to the diffuser, DO NOT:

1. Disassemble, alter or repair the unit. If the product needs repairing, please return to the retailer or contact the manufacturer.
2. Twist, puncture or stretch the cord of the power adaptor, put the power cord at the high temperature area or under heavy items that may bend or squash the cord.
3. Use the product if the power lead has been damaged or the socket is loose or there is an abnormal odor or noise coming from the unit.
4. Soak the unit in water or use in a wet area such as a bathroom or greenhouse or touch when hands are wet.
5. Fill the unit directly from a water tap – instead use the measuring up to fill from tap then pour water accurately and safely into the unit. Do not fill over 500ml “MAX” line.
6. Place the unit where the mist will be dispensed directly onto furniture, electrical devices, clothes, ceilings or walls.

7. Place in direct sun or any other high temperature areas or alternatively near an air conditioner or fan.
8. Place on an unstable surface or move during operation.
9. Place on electrical appliances such as a TV or audio equipment.
10. Cover the unit or block the mist outlet or air inlet.
11. Allow children to use the product. Keep out of the reach of children and pets.
12. Continuously use the unit for more than 600 minutes. Please cool down for 60 minutes before turning on again.

Troubleshooting

If experiencing trouble operating your device, please check the following before contacting the retailer or manufacturer for repair.

Trouble:

There is no mist coming out of the unit or the mist is abnormal.

Solutions:

1. Is the water level high enough in the reservoir?
 - Add more water to the reservoir. If that water level is over the indicated limit, this may cause the unit to act inconsistently.
2. Is the internal ultrasonic atomizer dirty?
 - Clean the inside of the unit (refer to “Maintenance”).
3. Is the base inlet clogged with dust?
 - Clean the inside of the base inlet (refer to “Maintenance”).
4. Are the cover and base aligned?
 - The dot indicator on the bottom of the cover must line up with the dot on the base of the unit in order for the mist to be emitted properly.

Trouble:

When you turn the unit on, it powers off within one second.

Solutions:

1. Is there water in the reservoir? Or is the water level high enough?
 - Add water to the reservoir.
2. Is the AC adaptor connected properly?
 - Pull the DC socket from the unit and connect it again.

Trouble:

Water is leaking from the unit.

Solutions:

1. Is the cover fitted properly?
 - Remove the cover fully and then refit to the unit.
2. Is there too much water in the unit?
 - Check the water level inside. If it has exceeded the maximum waterline (500 ml), pour out excess water from the drain side.
3. Is the water running too high or too low in temperature?
 - Remove the cover and see if there are vapor drops inside. If so, allow the temperature of the unit to rest for 60 minutes before turning on again.



PURE ESSENTIAL OIL
WORKS

Item #308341
pureessentialoilworks.com • 800.520.6000
tng worldwide • New Hudson, MI 48165
©2017 TNG • Made in China



PURE ESSENTIAL OIL
WORKS

Serenity Ultrasonic Aroma Diffuser




IMPORTANT INSTRUCTIONS — RETAIN FOR FUTURE USE

Congratulations on your purchase of the **Pure Essential Oil Works Serenity Ultrasonic Aroma Diffuser**. Please read the instructions and safety tips before use. Your diffuser comes with a one-year limited warranty. If for any reason you need service, please call 800-520-6000.

Specifications


This aroma diffuser uses ultrasonic technology to mist the water without heat for the most beneficial results.

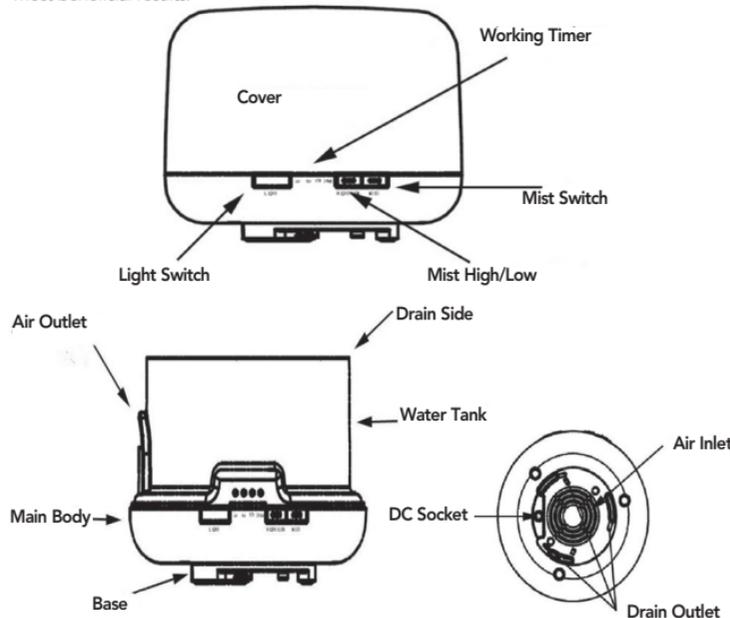



Size	6.5" Round X 4.75"H
Weight	About 1.1 lbs. (excluding adapter)
Supply Power: input	AC100-240V 50/60HZ
output	DC 24V 650mA
Length of the power supply	About 59"
Power	About 13W
Timer	60 min./120 min./180 min./ON (continuous spray)
Water Capacity	16.9 oz./500ml
LED light	9 Bulbs
Original material	Upper parts PP, Lower base ABS
As sensory	AC Adapter, measuring cup, user manual
Ultrasonic frequency	2.4MHZ

How to Operate

- Put the unit in stable position, remove the cover according to vertical direction. See Figure 1.
- Attach the AC plug to the DC-IN jack on the bottom of the unit. See Figure 2.
- Add clean water to the water tank using a measuring cup without exceeding the maximum waterline of 500 ml. DO NOT refill while the unit is in operation. DO NOT use hot water or mineral water.
- Add fragrance oil into the water (Advice one drop oil per 100 ml water). Use more or less oil depending on the level of intensity you prefer. See Figure 3.

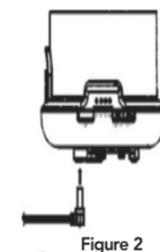

- Put the cover back on the unit, rotate the cover to adjust the mist outlet to the right position. DO NOT switch on the unit without the cover shielding the water tank.
- Attach the AC adapter plug to power outlet.
- Press the "MIST" button to switch on and start in continuous mode. To switch to intermittent mode, press and hold "MIST" button for 2 seconds. The indicator light will flash and the diffuser will make two "beeps". To return to continuous mode, hold button for 2 seconds again and the diffuser will make one "beep." Press the "MIST" button to set the desired duration, choose from 60 mins, 120 mins, 180 mins or on (keep working until water is gone). The unit will power off automatically when it reaches the timer. Please hold "MIST" button if you need to turn it off. See Figure 4.
- Press the "Light" button to select the LED light to turn on or off or to adjust the intensity of the light (strong/weak) and to change the color. See Figure 5.
- Press "HIGH/LOW" to adjust the spray intensity. (Strong or weak). See Figure 6.
- When not in use for an extended period, pour any remaining water from the reservoir before storing it in a cool and dry place.
- If the water level inside the unit runs too low, the unit will automatically stop operating, even if you activate the "MIST" button.
- The light also will turn off when the operating time of the unit is up.

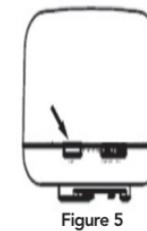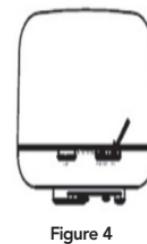

Precautions

- The concentration of the mist may vary. This is normal.
- Different water, humidity, temperature and airflow will impact mist intensity slightly. Use filtered water for best results.
- The unit CANNOT be activated without water inside the reservoir. There will be a warning sound of "B-B-B" when the "MIST" button is pressed.
- Only use 100% pure natural aroma essential oil.
- Clean diffuser after use and before changing to another essential oil.

Accidental Spillage

In case of accidental spillage during operation:

- Disconnect the power supply and then remove the cover.
- Pour out the rest of the water entirely from the unit's drain side.
- Shake the unit lightly to pour out the water from the drain outlet and allow 24 hours to dry before resuming use.

