

9. Push the cool shot button to set the style with cool air once you have achieved the desired style.
10. Power Off – Turn switch on dryer to OFF position and unplug. Wait for the appliance to cool before storing. Do not wrap the cord around the dryer. Use the hanging ring to keep the cord from tangling and wearing.

Maintenance:

This appliance is virtually maintenance free. No lubrication is needed. For proper operating performance, the dryer must be kept clean and free of dust, dirt and hairspray.

To Clean:

1. Unplug unit and allow to cool before cleaning.
2. Use soft, slightly damp cloth to wipe the external surfaces. Do not use detergents, solvents, hard abrasive cleaners or scouring pads.
3. Do not allow water or any other liquid to get into unit.
4. Intake grille must be cleared of any build-up of lint or hair with a small brush or vacuum cleaner brush attachment.
5. Make sure all components are dried thoroughly before operating.

Do not immerse unit in water.

Cleaning Air Filter:

1. Remove the end cap by rotating counter-clockwise until it detaches from the dryer.
2. Remove dust and lint from the internal lint filter by using a brush, fingers or a vacuum cleaner.
3. The filter can also be removed from the end cap if necessary.
4. To replace the end cap, align the end cap's tabs with the indentations inside the back grill of the dryer. Rotate the end cap clockwise until it looks into place.

Storage:

- Before storing the appliance, let it cool down first.
- Appliance should be kept in a place which is safe, dry, and out of reach of children.
- Never wrap the cord around the appliance or the cord will wear and break prematurely. Avoid jerking, bending sharply, twisting or straining the cord and plug.

Limited Warranty

XHI Professional offers a one-year limited warranty for defects only. Not responsible for unit due to tampering, negligence, dropping, outdoor use or operating near water. If you experience any issues with the SAPPHIRE ROCKET Pro Hair Dryer, please contact us at 800-520-6000. Do not contact or return to the retailer that you purchased from. In case of warranty replacement, please have your proof of purchase available.



Item #444011

tng worldwide • New Hudson, MI 48165
xhiprofessionalworks.com • 800.520.6000

©2019 TNG • Made in China

XHI
PROFESSIONAL
WORKS

SAPPHIRE ROCKET Pro Hair Dryer



SAPPHIRE ROCKET Pro Hair Dryer

features the latest ionic generation technology to create a hair dryer so powerful, so smart and so dynamic, Rocket is the hair dryer of choice for both consumers and professionals.

- Patent-pending technology helps to prevent heat damage and protect natural shine
- Quiet, yet powerful 1800W AC motor features supersonic drying time, less than 50% of the time of regular hair dryers
- Magnetic styling concentrator pops on and off in less than a second
- Lightweight, concentrated and easy to hold
- 4 Exact heat settings: Fast, regular, gentle and cold
- Separate cold shot button
- 2 Exact speed settings: Fast and regular/gentle
- Protective swivel cord and hanging ring

IMPORTANT INSTRUCTIONS — RETAIN FOR FUTURE USE

Congratulations on your purchase of the **XHI SAPPHIRE ROCKET Pro Hair Dryer**. Please follow the simple instructions and precautions before operating the unit. The unit comes with a one-year limited warranty. If for any reason you have questions or issues, please contact us toll-free 800-520-6000.

Technical Data:

Power:	110V, 60Hz	Weight:	1.2 lbs. (excluding cord)
Capacity:	1800W	Cord length:	7.5 ft.
Motor:	AC		

Precautions:

When using electrical appliances, especially when children are present, please always follow the basic safety precautions as listed below:

READ ALL INSTRUCTIONS BEFORE USING. KEEP AWAY FROM WATER.

DANGER: As for most electrical appliances, electrical parts are electrically live even if the unit is turned off.

For function and avoiding fatal risk by electrocution:

1. Always unplug the appliance immediately after using.
2. Do not use while bathing or showering.
3. Do not place or store the appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. If the appliance falls into water, unplug it immediately. **Do not reach into water.**
6. Do not use an appliance with a twisted, bent or otherwise damaged cord.

Warning: To reduce the risk of burns, electrocution, fire or injury:

1. An appliance should never be left unattended when plugged in. Extra care should be paid when appliance is used by, on or near children or individuals with certain disabilities.
2. Do not use any attachments which are not provided by the manufacturer. Follow all instructions mentioned in this manual when using.
3. Never use the appliance when cord/plug is damaged. Also, if the appliance does not work properly or is dropped into water/fluid, do not use it or/and return the appliance to a service center for examination and repair.
4. Keep the power cord away from heated surfaces. Do not wrap the cord around the appliance.
5. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, etc.
6. Never use while sleeping.
7. Never drop or insert any object into any opening on the appliance.
8. Do not use outdoors or/and never use the appliance together with aerosol (spray) products or where oxygen is being administered.
9. Do not use any extension cord with this appliance.
10. Do not direct hot air toward eyes or other heat-sensitive areas.
11. Air outlet grill and attachments may be hot during use. Allow them to cool before handling. To avoid burn hazard, do not let bare skin touch heated surfaces.
12. Do not place appliance on any surface while it is operating.
13. While using the appliance, keep your hair away from the air inlets.
14. To prolong the life of the dryer, keep filters clean of hair and dust.
15. Do not plug in or unplug this appliance when your hands are wet.
16. Do not use with voltage converter.
17. Always store this appliance and cord in a moisture-free area.
18. **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water. When using this appliance near water

(e.g., bathrooms), the use of an electrical outlet with a Ground Fault Circuit Interrupter is recommended.

19. Always unplug appliance after use, especially when it is used in bathroom. The proximity of water presents a hazard even when the hair dryer is switched off.
20. Use this appliance only for its intended use. Do not operate with wigs or animal coat.

Instructions For Use:

This appliance may be plugged into any 100-125VAC, 60Hz electrical outlet (ordinary household current). Do not use with any other electrical outlet.

Note: This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug fits in a polarized outlet only one way. If the plug does not fit into the outlet, reverses the plug and try again. If it still does not fit, contact a qualified electrician to install the proper plug. Do not attempt to force the plug into an improper outlet. On first use, the dryer may emit smoke, but this is normal with a new appliance and not dangerous.

Line Cord Safety Tips

- Never pull or yank on cord.
- To insert plug, grasp it firmly and guide it into outlet.
- To disconnect appliance, grasp plug and remove it from outlet.
- Before each use, inspect the line cord for cuts and/or abrasion marks. If any are found, appliance should be repaired or replaced.
- Never wrap the cord tightly around the appliance, as this could place undue stress on the cord and cause it to fray and break.
- **DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE, OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.**

Caution: Heating section should never be touched as it may be hot and burns may occur. To avoid possible burns to hair or scalp, use hot setting only when hair is wet. Reduce to lower heat as hair dries. Do not keep appliance directed at one place, keep it in constant motion. For maximum air flow, hold dryer no closer to head than six inches.

How to Use:

1. Untwist cord before use and plug into outlet.
2. Towel-pat wet hair to remove excess water and to shorten drying time.
3. Untangle hair and part into sections.
4. Set dryer temperature and speed and circulate the airflow through a section of hair at a time. Move dryer steadily across each section and direct airflow at hair, not scalp.
5. Do not concentrate airflow on any one area to avoid over drying and possible damage to hair or skin.
6. Always keep dryer's intake vents unobstructed and free from hair while drying. Block or clogged air intake vents will cause the dryer to overheat. This appliance is equipped with an automatic safety device that will shut the dryer or heat off to prevent damage or personal injury. In the event that the appliance stops or releases only cool air during use, unplug the cord and allow the dryer to cool for 10-15 minutes before restarting.
7. When hair is almost completely dry, lower heat and speed setting and begin to style hair as desired.
8. Use the airflow concentrator attachment for a more directed airflow. Make sure the attachment is properly fixed on dryer before using, to avoid risk of injuries. To remove, allow dryer and attachment to cool, and then gently pull away from dryer.